

MARGO ELECTRA

1100 - INSTRUCTION MANUAL



FOR PRODUCT
MANUALS AND VIDEOS,
SCAN THE QR CODE



DISCLAIMER: THIS PRODUCT WAS DESIGNED AND INTENDED FOR THE SOLE PURPOSE OF WILDLIFE CONTROL AND MANAGEMENT. THE PROPER AND SAFE USE OF THIS PRODUCT IS THE SOLE RESPONSIBILITY OF THE OWNER AND/OR OPERATOR. THE SELLER ASSUMES NO RESPONSIBILITY OR LIABILITY FOR THE IMPROPER AND/OR ILLEGAL USE, RESALE, ANY PHYSICAL INJURY AND/OR PROPERTY DAMAGE RESULTING FROM DELIBERATE OR ACCIDENTAL DISCHARGE OF THE PRODUCT, OR MODIFICATIONS MADE TO THE PRODUCT, SELF-SUPPLIED MATERIALS USED ALONG WITH THE PRODUCT, CARELESS OPERATION OR MAINTENANCE NEGLECT OF THIS PRODUCT.



TABLE OF CONTENTS

- CANNON SETUP 3
- FEATURES 4
- CANNON DEPLOYMENT 4
- ACCESSORIES 5
- ELECTRA MODELS 5
- SAFETY INFORMATION 6
- INSTALLATION 6
- PROGRAMMING
 - Start Up 7
 - Shot Intervals 7
 - Quiet Times 8
- CONTROL OPTIONS
 - #1200 - Margo Electra with
 - High Frequency Radio Control 9
 - #1400 - Margo Electra with
 - Cellular Control 10
 - #1500 - Margo Electra with
 - Push Button Control 16
- MAINTENANCE 17
- PARTS DIAGRAM 18
- PARTS LIST 19
- TROUBLESHOOTING 20


CANNON SETUP

Before operating your cannon, the legs must be installed. The legs attach to the cannon body and are secured using wing nuts (butterfly nuts) — no tools required.



MARGO ELECTRA WITH LEGS FULLY ASSEMBLED

1. Position the Left and Right Metal Legs against the mounting bracket on the cannon body.
2. Secure each leg with 2 Wing Nuts (4 total). Tighten the wing nuts firmly by hand — this keeps the bridge of the cannon centered on the barrel for proper function.
3. Confirm the cannon sits stable and level on firm ground before use.

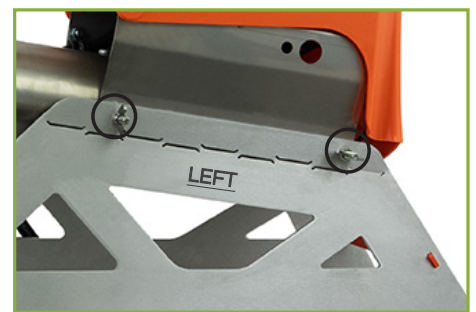

WING NUTS (4X)

HAND-TIGHTEN WING NUTS FIRMLY — KEEPS THE BRIDGE CENTERED ON THE BARREL

FEATURES

- ▶ 120dB cannon blasts scare birds and keep them away.
- ▶ One 20lb cylinder will provide over 15,000 detonations.
- ▶ Advanced digital clock for preset firing times and multi-shot bursts.
- ▶ Microprocessor controlled timing with a backup real time clock.
- ▶ Improved battery life, uses 2mA of power in standby for regular cannons and 12mA for radio versions.
- ▶ On demand firing mode helps to prevent bird habituation.
- ▶ 14 Amp/Hr battery provides 120 days of average use and 60 days for radio version.
- ▶ For Radio Controlled: 90MHz receiver provides 3-5km (2-3mi) line of sight range.

CANNON DEPLOYMENT

- ▶ Birds find it difficult to adapt to the confusion presented when using several deterrents together. Combine scare cannons with other different audio and visual deterrents for the best effect.
- ▶ Deploy cannons before your crops are damaged, not after. It's easier to keep birds out of the control area than to chase them out once they've been rewarded.
- ▶ Birds are most active at dawn and dusk.
- ▶ To reduce overall sound output and prevent habituation, restrict cannon use when birds are not active.
- ▶ A single cannon will protect up to 6 acres of high value crop from persistent birds.
- ▶ Relocate cannon frequently to prevent habituation. It should be moved every 2-3 days when birds are present.



ACCESSORIES



- ▶ The **Electra Rotating Tripod (#1101)** provides 360° coverage and elevates the cannon's blast. Using the tripod will increase the cannon's coverage to 30 acres.
- ▶ Paired with the Electra Rotating Tripod (#1101), the **Tripod Mounted Solar Kit (#1102)** provides continuous power and protects your battery from the elements.
- ▶ The **Solar Case Kit (#1103)** provides continuous power and protects your battery from the elements. **Not** paired with the Electra Rotating Tripod (#1101).



THE TRIPOD MOUNTED SOLAR KIT (#1102) AND THE SOLAR CASE KIT (#1103) ARE NOT INTERCHANGEABLE.


ELECTRA MODELS

MARGO ELECTRA BASE MODEL (#1100) INSTRUCTIONS ARE APPLICABLE TO ALL MARGO ELECTRA CANNON MODELS.



Margo Electra with High
Frequency Radio Control
(#1200)

This cannon uses the Margo Electra Scare Cannon (#1100) as a base with a High Frequency Radio Controller (#1301) that allows the user to fire the cannon remotely on a line-of-sight range of 3-5km (2-3mi).

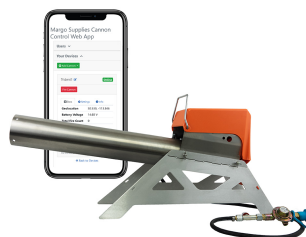

Margo Electra with
Cellular Control
(#1400)

This cannon uses the Margo Electra Scare Cannon (#1100) as a base with a Cellular Control. Control your cannon, view its status, and customize settings from anywhere with an internet connection!



Margo Electra with
Push Button Control
(#1500)

This cannon uses the Margo Electra Scare Cannon (#1100) as a base with an added Push Button Controller which allows the user to fire the cannon On Demand.

SEE PAGES 9-15 FOR INSTRUCTIONS ON ADDITIONAL CANNON CONTROLS

SAFETY INFORMATION

- ▶ Clear an area of 5m (15ft) surrounding the gas cylinder and cannon of all debris, including flammable and combustible materials, such as dried weeds and grass.
- ▶ The area directly in front of the megaphone must be clear of all obstructions.
- ▶ Never place objects or look directly into the megaphone.



WARNING!
Always wear proper
ear and eye protection
when operating the
cannon.

- ▶ Never walk in front of or look into the barrel.
- ▶ Do not place objects on top of the cannon.
- ▶ Do not operate the cannon in an enclosed space.
- ▶ Keep fire and other sources of heat/ignition away from the cannon.
- ▶ Cannon should be on stable, horizontal ground when in use.
- ▶ Only use LP Gas (propane) or butane gas. Keep canister upright. Do not place in a pit.
- ▶ Call the proper authorities/emergency services in case of a fire.
- ▶ Service cannon after 150kg (330lbs) of use.
- ▶ Replace the gas hose every 2 years. Contact Margo Supplies to order replacement.

INSTALLATION

1. Make sure the Regulator and the Gas Cylinder both have clean connections.
2. Connect the Gas Regulator (#9023) to your gas canister (not included) and snug with a 24mm wrench. Do not open propane valve.
3. Hook up cannon to power source.
4. Keep the battery raised above ground level and sheltered from the elements.
5. The cannon is now ready for programming, if desired. Consult the following pages for further instructions.
6. To fire the cannon, open the gas valve and then press the Red Hose Fracture Button on the Pressure Regulator (#9023).

THE HOSE FRACTURE BUTTON MUST BE
PRESSED EACH TIME THE GAS IS TURNED ON




SEE PAGES 18-19 FOR PARTS DIAGRAMS AND A FULL PARTS LIST.

PROGRAMMING

START UP:

1. Rotate the Control Knob to navigate the menu. The menu will reset to the homepage after 45 seconds without use. Settings are saved and stored in an internal memory.

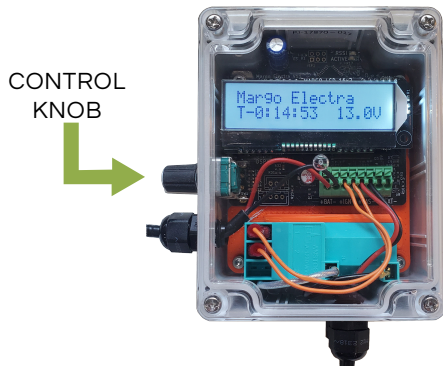

2. When first turned on, the screen will flash:

```
*MARGO SUPPLIES*  
FIRMWARE: 1.0
```

3. If equipped with radio control, the screen will also flash the following:

```
*MARGO SUPPLIES*  
Wireless Enabled
```

4. The home screen will display a countdown until the next firing cycle and the battery voltage.

```
Margo Electra  
T-0:15:00 12.1V
```

5. To test fire the cannon, navigate to the test fire screen and push the Control Knob. The cannon will fire up to 4 blasts. This screen also indicates the cannon's total fire count.

```
TEST FIRE  
Count 20
```

SHOT INTERVALS:

6. To set the intervals between firing cycles, use the following guide:

ON DEMAND → No timed firing will occur, for use with radio and push button.

FIXED TIME → Set a fixed time between firings.
5 | 9 | 15 | 30

RANDOM → Set random time between firings.
5 | 15 | 60
example: Random 15 will fire randomly during the 1 to 15 minute range.

NOTE: On Demand must be selected to remotely detonate cannon. For more information, please see page 9 for radio control and page 15 for push button control.

FOR CUSTOM FIRING CYCLES, INQUIRE WITH MARGO SUPPLIES.

PROGRAMMING

7. Factory timing is set to 15 minute intervals.

SET INTERVAL
15 MIN

8. For cannon's equipped with wireless receivers (#1200), this additional menu is available to select the desired radio channel. The factory channel is 1 and 98 other channels can be programmed.

WIRELESS TRIGGER
Channel: 1

NOTE: The control box and transmitter must be on the same channel. See page 10 for more information.

9. Use this screen to set the number of shots per time interval. Options are selectable between 1 - 4 shots per interval. The factory setting is 2.

SHOTS / CYCLE
2

QUIET TIMES:

The real time clock keeps track of time when the cannon is not connected to power. It is a 24hr clock that must be set manually. The internal battery keeps time for up to 100 days without power. Connect the cannon to power to recharge the clock's battery.

SET CLOCK
18:16:14

10. The real time clock is also used for Quiet Time intervals. To set, depress the Control Knob and move through the menu as directed. Set the start and end time as it relates to the real time clock. Some examples of Quiet Times are:

QUIET TIME 1
OFF

Quiet between 10AM and 4PM (mid-day silence).

QUIET TIME 1 SET
10:00 > 16:00

Quiet between 9PM and 6AM (overnight silence).

QUIET TIME 1 SET
21:00 > 06:00

CONTROL OPTIONS -


#1200 ELECTRA WITH HIGH FREQUENCY RADIO CONTROL

- ▶ Operating frequency band 902 to 928 MHz.
- ▶ Ideal RF line-of-sight range of 3-5km (2-3mi).
- ▶ Transmit power output 24 dBm (250 mW).

FOR 900 MHZ EQUIPPED MODELS, THE FOLLOWING MODEM APPROVALS APPLY:

- ▶ Innovation, Science and Economic Development Canada (ISED): 1846A-XB900HP
- ▶ United States (FCC Part 15.247): MCQ-XB900HP

1. Connect the antenna and the antenna cable as shown below. Medium thread lcocker is recommended.
2. Ensure smooth operation of the lid without pinching the coaxial antenna wire inside.
3. The green "RSSI" LED indicates signal strength.

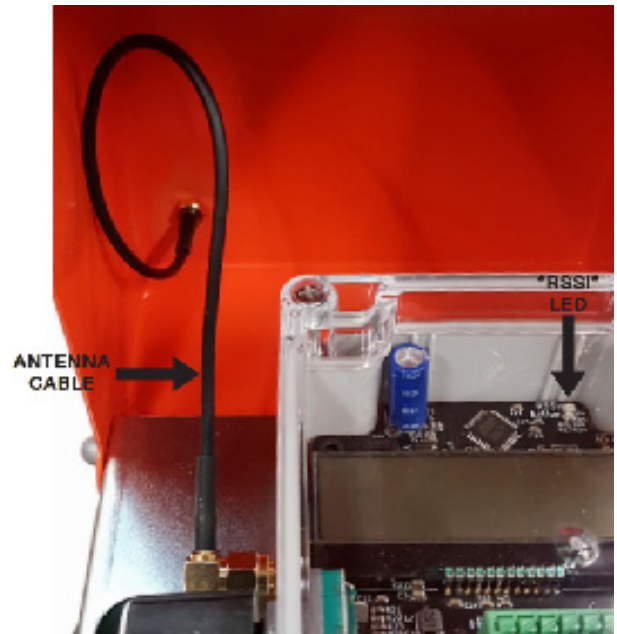

NOTE: On Demand must be selected to remotely detonate cannon. Please see page 7 for programming information.

MARGO TRANSMITTER QUICK START GUIDE


1. Enter the selected channel using the number keypad.
 - Indicator will flash 1 time for the first digit and 2 times for the second digit.
2. Press the "FIRE LAST" button to configure channel and to fire.
 - Indicator will flash 3 times.
3. Pressing the "FIRE ALL" button will trigger all devices.
 - Indicator will flash 5 times.
4. Subsequent firings on the same channel can be done by simply pressing the "FIRE LAST" button.



Transmitter is powered by 2 - AA batteries and housed in a weatherproof case.

MARGO ELECTRA BASE MODEL (#1100) INSTRUCTIONS ARE APPLICABLE TO ALL MARGO ELECTRA CANNON MODELS.

CONTROL OPTIONS - #1400 ELECTRA WITH CELLULAR CONTROL

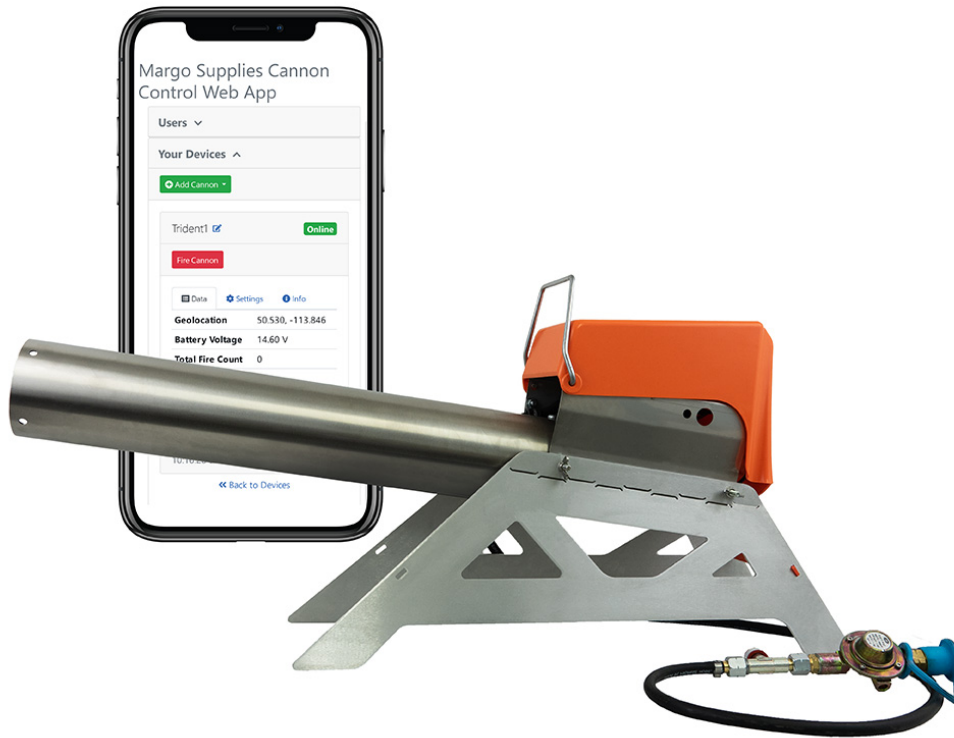

MARGO ELECTRA BASE MODEL (#1100) INSTRUCTIONS ARE APPLICABLE TO ALL MARGO ELECTRA CANNON MODELS.

CANNON CONTROL APP

Cannon Control Login

Email

test@account.com

Password

.....

Submit

[Forgot password?](#) [Looking for a Demo?](#)

[Margo Supplies 2022](#) [Need Help?](#)

Log In

The Margo Cannon Control app is a web-based app. This means it can be accessed through any web browser using a desktop or mobile device.

The app can be accessed by going to <https://cannoncontrol.margosupplies.com/>

OR

By clicking the "Login" button on margosupplies.com and scrolling down to the Cannon Control Sign-in.

Users can also change their password using the "Forgot Password?" prompt.

CONTROL OPTIONS - #1400 MARGO ELECTRA WITH CELLULAR CONTROL




The Basics

Once logged in, you will be taken to the dashboard which is where you will find:

- Tips and Tricks for a Successful Deployment
- Safety
- Wifi Users Start Here
- Troubleshooting
- How to Add Cannon Control to Your Home Screen
- Future Features

By clicking the tabs icon in the top right corner, you will see a drop down menu with the following tab options:

- Dashboard
- Map
- Devices
- Logout

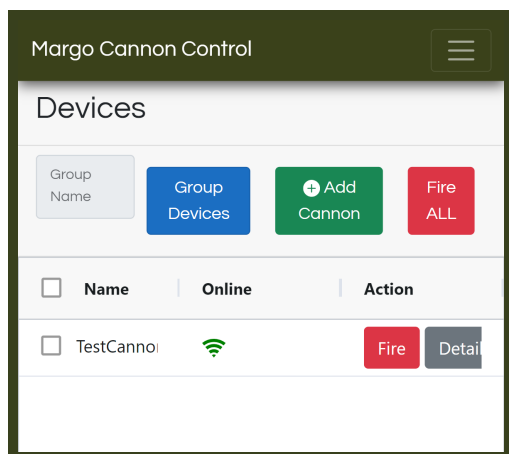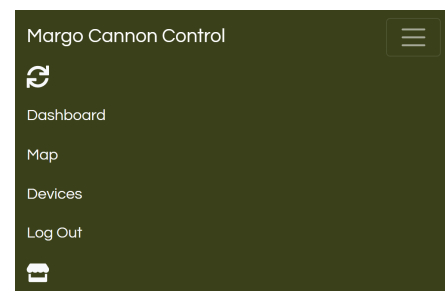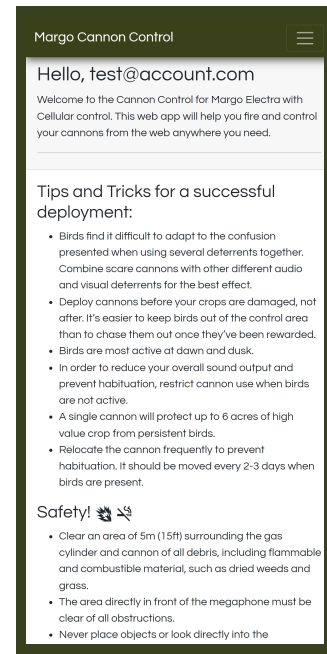

Devices

From this screen, you can add cannons to your account as well as filter through existing cannons and view them in a list or map view.

To access details about a specific cannon, simply click on the cannon details or ID.

To change from list view to map view, click the three lines in the top right corner and select Map.

CONTROL OPTIONS - #1400 MARGO ELECTRA WITH CELLULAR CONTROL

Devices - Details

Devices

Group Name: [Text Box] [Group Devices] [Add Cannon] [Fire ALL]

☐	Name	Online	Action
☐	TestCannon		[Fire] [Detail]

ID: e00fce686c03d33e4eb0d5c4

Battery Voltage: 14.2V

Temperature: 62.80C (145.04 F)

Life Counter: 64

Misfire Counter: 0

Tank Counter: 3 [Reset]

Notes: [Try writing some notes here]

[RGB Signal] [Change Timer]

Longitude: -113.8466
Latitude: 50.5299
Accuracy: 17.42
Signal: 100%

570 Ave E, 104 St E, High River Airport

- **Fire ALL** - Fires all cannons associated with your account.
- **Rename Cannon** - Double click the name to rename your cannon. We recommend something meaningful like "West Runway #1".
- **Fire Cannon** - Pressing the red "Fire Cannon" button will tell the cannon to fire with the desired number of shots.
- **Battery Voltage** - As measured by the cannon control box.
- **Life Counter** - The lifetime number of shots from this cannon.
- **Misfire Counter** - This is the total number of missed shots from this cannon. This most likely indicates that the cannon is out of Propane or low voltage.
- **Tank Counter** - This is manually reset when a propane tank is refilled and gives an indication of when propane needs to be replaced (approximately 15,000 shots per 20lb propane tank).
- **RGB Signal** - This will cause a rainbow LED to appear on desired cannon. This is helpful in identifying cannons and testing without firing.
- **Change Timer** - This button takes you to the Change Timer menu where you can change the fire intervals as needed.
- **Geolocation** - Shows the Latitude and Longitude of the cannon. This information is updated hourly by the device.

CONTROL OPTIONS -

#1400 MARGO ELECTRA WITH CELLULAR CONTROL

Change Cannon Settings

Trigger Schedule: On Demand Only

Shots Per Trigger: 1

Hour : Minute

Quiet Time 1: ON (21:30) OFF (6:45)

Quiet Time 2: ON (0:0) OFF (0:0)

Quiet Time 3: ON (0:0) OFF (0:0)

• Regular timer will not fire during quiet time
 • 24 Hour Time 00:00 through 23:59
 • Quiet Times are overridden with on demand firing

Save Settings

Change Timer - Change Cannon Settings

- **Trigger Schedule** - How often you want the cannon to automatically fire on a timer.
- **Shots Per Trigger** - The number of times you want the cannon to fire in a specific interval. Default value is 3. Values 1 -4 are accepted.
- **Quiet Time(s)** - Quiet times override the schedule. Cannon will not fire during these times. Please note: pressing "Fire Cannon" in the app will always fire the cannon.
- **Save Settings** - Click to apply changes to cannon.

Groups

- **Add Groups** - In the Devices menu, manually select the cannons you want to group (a blue check mark will appear when they are selected). Give the group a name. Then click Group Devices.
- **Fire** - This will fire all cannons in the group.

Devices


Group Name [Add] [Group Devices] [Add Cannon] [Fire ALL]

✓ Name	Online	Action
✓ TestCannon1	📶	[Fire] [Details]

Groups

Group	Devices	Action
TestGroup	• TestCannon1 (e0)	[Fire]

CONTROL OPTIONS - #1400 MARGO ELECTRA WITH CELLULAR CONTROL

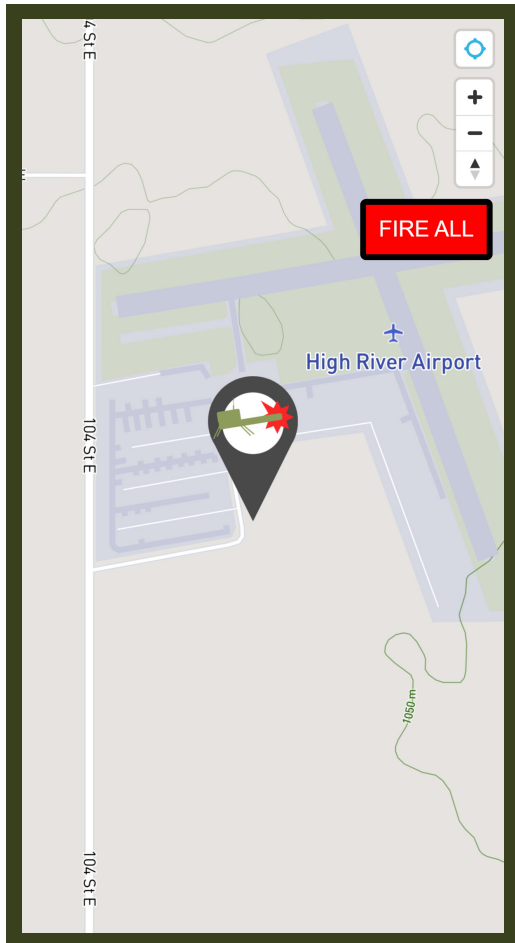


Maps

- **To View Specific Cannon** - When in the Devices menu, click on the cannon details for the cannon you want to view. This will bring up the geolocation of the cannon you desire.
- **Maps Page** - This will show an overall map with the location of the device you are using and all cannons associated with your account.
- **Your Location** - Click on the  icon to be taken to your location.
- **Fire All** - This will fire all cannons associated with your account.
- **Fire Specific Cannon** - You can also zoom into a cannon and fire that specific cannon by clicking the  icon.

Add Cannons

- **Cannon ID** - Insert your unique cannon ID or scan the QR Code.
- **Cannon Name** - Name your cannon. We recommend something meaningful like "West Runway #1". Or use the "Generate Name" button.
- **Add** - Click the "Add" button to add your cannon to your account.

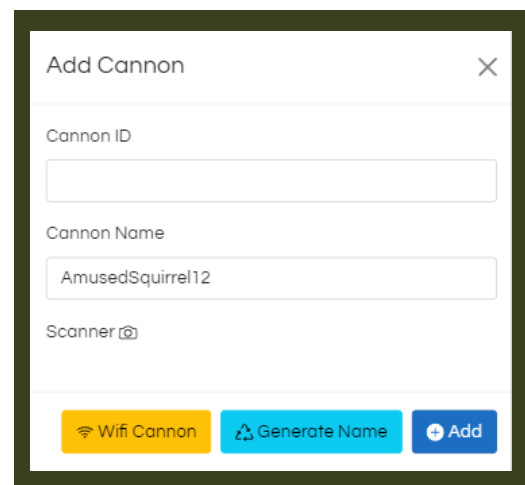

Add Cannon

Cannon ID

Cannon Name

AmusedSquirrel12

Scanner 

Wifi Cannon Generate Name Add

CONTROL OPTIONS - #1400 MARGO ELECTRA WITH CELLULAR CONTROL



ADDING THE MARGO CANNON CONTROL TO DESKTOP & HOME SCREEN

Android Devices (Chrome)



If you use Google Chrome on your Android device, you can add a shortcut to quickly open the Margo Cannon Control Web App.

1. Open Google Chrome (Mobile or Desktop)
2. Find the settings menu by clicking the three dots in the upper right hand corner on desktop.
3. Click "Add to Home screen"

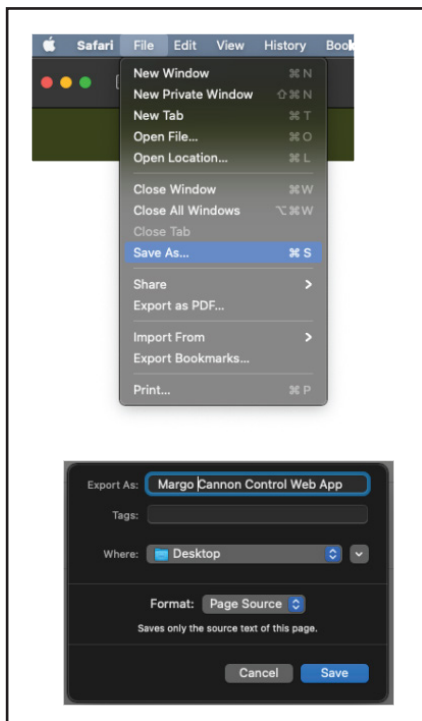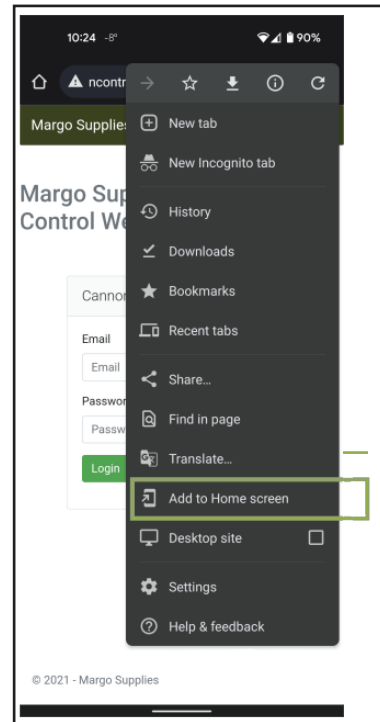

iOS Devices (Safari)



If you use Safari on your iOS device, you can add a shortcut to quickly open the Margo Cannon Control Web App on your desktop.

1. Open Safari (Desktop)
2. Navigate to the Cannon Control App
3. Click File > "Save As..." and a dialogue box will open asking you to name the shortcut, enter the name you wish to use.
4. Change the format to "Page Source"
5. Click "Save". A shortcut will be added to your desktop for quick access to the Cannon Control Web App.

CONTROL OPTIONS - #1500 ELECTRA WITH PUSH BUTTON CONTROL



- ▶ The Electra Scare Cannon can be fired on demand by a Push Button Radio Controller. This device must be hardwired into the Control Box through the extra power "in" slot.
- ▶ Once hardwired, you can fire your Margo Electra Scare Cannon On Demand by simply pushing the push button control.

NOTE: On Demand must be selected to remotely detonate cannon. Please see page 7 for programming information.

MARGO ELECTRA BASE MODEL (#1100) INSTRUCTIONS ARE APPLICABLE TO ALL MARGO ELECTRA CANNON MODELS.

MAINTENANCE

IMPORTANT: DISCONNECT CANNON FROM GAS WHEN STORING

A full maintenance check should be performed at least once a year. When the cannon is not in use, it should be stored in a cool, dry place.

NOTE:

- ▶ Store in a dry area when not in use.
- ▶ Never use flammable cleaning agents on this device.
- ▶ Do not use a stream jet sprayer to clean.
- ▶ Check the barrel of the cannon for mouse nests before use if it has been in storage.
- ▶ Ensure all nuts, bolts and screws are tight.
- ▶ Inspect the gas hose for defects and leaks. Replace old or cracked hose with new hose. Only use specialty hose from Margo Supplies.
- ▶ Check gas regulator for damage or leaks. Repair or replace parts before use.
- ▶ Check for corrosion on or around the Spark Plug (#12618). Clean with a wire brush or emery cloth.
- ▶ Always wear hearing protection while operating on or while in the vicinity of the cannon.



CANNON PARTS DIAGRAM

Exploded view — every part is linked back to its location on the assembled cannon. Full names & SKUs in the Parts List.



CANNON PARTS LIST

Only the items below marked ** are sold separately from the Complete Control Unit.

ITEM #	SKU	DESCRIPTION
--------	-----	-------------

MAIN BODY / CONTROL UNIT

1	1110a	Control Unit (Complete)
1a	ME-9018a	Ground & Spark Plug Wire **
1b	ME-12768	Wire Harness **
1c	ME-12708	Battery Cable **
11	ME-9805	Bridge
10	ME-9802	Lid
9	ME-91616	Handle

FRAME & HARDWARE

19	ME-91656	Leg (x2)
—	M-VM6	Butterfly Nut, M6 (x4)
—	M-M6	Hex Nut, M6 (x3)
—	M-M4L	Locking Nut, 4mm
—	M-M610	Screw, M6 x 10 (x5)

GAS SYSTEM

2	ME-91110	Barrel
3	ME-9928	Spark Plug
4	ME-9027	Regulator
21	ME-011	Regulator End Cap
5	ME-12409	Solenoid Valve
8	ME-12408A3	Inline Filter
7	M-SL101	Propane Hose (5ft)

CLAMPS

6	ME-6555a	Pinch Clamp (x2)
15	ME-9921	Hose Clamp, Small (x2)
16	ME-LK13	Hose Clamp, Large

ELECTRICAL ACCESSORIES

17/18	M-9910r	Alligator Clip, Red
17/18	M-9910b	Alligator Clip, Black

TROUBLESHOOTING

PROBLEM

CAUSE

SOLUTION

Cannon operates but there is no explosion or sound.

Gas tank valve is not open.

- Open the gas valve.

Gas tank is empty or does not have enough pressure.

- Fill or replace gas tank.

Hose Fracture Protector Button hasn't been pushed.

- Push the Hose Fracture Protector Button (red) one or more times.

Poor gas mixture.

- Gas mixture in the gas tank is not correct, replace the gas tank.

Gas valve is blocked or partially blocked.

- Open up the blockage with a thin wire, approximately 0.6mm in diameter.

Ignition gives a weak or no spark at all.

- Check the Spark Plug for effectiveness. The porcelain base could be broken. Replace if necessary. Clean corrosion on any of the connection points between the barrel, spark plug and the ground wire. Separate all pieces to clean contact points with an emery cloth. If the spark plug is wet, be sure to dry it well.

The gas valve will not operate.

- Check connection points. If properly connected, call the dealer for repair.

Debris in combustion chamber or other opening.

- Remove debris and other blockages from around the cannon. Common instances are mouse or spider nests.

TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
Cannon is connected yet fails to operate.	Battery cable is not connected properly.	• Ensure the battery terminals are connected. The black battery clip is negative and the red battery clip is positive.
	Low battery.	• Recharge or connect a new battery.
Cannon works, but gives dull explosions.	Wind is too strong; gas/air mixture is disturbed.	• Place cannon down wind, out of wind, or behind a screen.
	Gas valve is blocked.	• Open blockage with a thin wire, approximately 0.6mm in diameter.
Cannon is leaking.	The coupling nut on the regulator is not tight.	• Tighten the coupling nut.
	Gas hose is damaged.	• Replace the hose.
Poor radio reception.	Antenna placement is off.	• Ensure the antenna is standing as high as possible.
	Cannon placement is off.	• Ensure the cannon is not placed near high voltage power lines or other high power equipment.