

15MM PYROTECHNICS

INSTRUCTIONS FOR USE

- To be used with 15 mm pyrotechnic launchers only.
- Use with 6 mm (.22 cal) or 9 mm (.38 cal) crimped blank cartridge.
- To be used in accordance with the Operating and Safety Instructions as provided with the launcher.
- Read the "Instructions For Use" printed on each 15 mm pyrotechnic cartridge packaging before using.
- Insert 15mm pyrotechnic cartridge into the launcher muzzle cup.
 - Bangers/Flares/Comets are inserted with black end in.
 - Screammers /Whistlers are inserted with hollow end in.
- Fire at a 45° angle above the ground into clear, open sky.
- Pyrotechnic cartridges are to be sold and stored in original, not tampered with, manufacturer's packaging only.



THESE CARTRIDGES ARE HIGHLY SENSITIVE TO MOISTURE AND AMBIENT HUMIDITY. THIS PRODUCT SHOULD NOT BE LEFT IN ANY LOCATION WHICH WOULD ALLOW HIGHER HUMIDITY LEVELS TO AFFECT THE CARTRIDGES.

Store in a secure, cool, dry place to prevent product degradation which could result in product failure. In areas where humidity is high and climate controlled storage is unavailable, use silica gel sacks in storage cabinets.

15MM PYROTECHNICS

SAFETY INSTRUCTIONS

GENERAL

- Only adults who have a clear understanding of these instructions and a working knowledge of pyrotechnic scare cartridges should use this product.
- Keep out of reach of children.
- 15 mm pyrotechnic cartridges are sold for the purpose of wildlife management and control only.
- Always wear proper PPE such as eye and ear protection, as well as a hard hat and gloves when using this product.
- Do not fire at humans, buildings, into dry fields, at any flammable materials or liquids, and directly at wildlife.
- This product is not to be sold to persons under 18 years old.
- Never load or fire pyrotechnic cartridges from a vehicle or vessel.
- Operator must fire these cartridges in an area clear of all personnel and personnel should remain a minimum of 5 meters behind them.
- Do not make modifications to these products.



TRANSPORTATION

- Cartridges should be transported in a closed container away from sources of ignition.
- Never transport launchers with crimped blanks or pyrotechnic cartridges loaded.

MISFIRE PROCEDURES

- Carefully set launcher on the ground right away.
- Step back (a minimum of 10 meters) for at least 30 minutes.
- After 30 minutes, submerge misfired cartridge in water for 48 hours.
- Do not use bare hands to handle cartridge.
- Wear gloves and use long tongs, or a similar tool, to handle misfired cartridges.

THE PURCHASER IS RESPONSIBLE FOR THE PROPER AND SAFE USE OF THIS PRODUCT. FAILURE TO COMPLY WITH THE PRECEDING SAFETY INSTRUCTIONS COULD RESULT IN SERIOUS INJURY OR DEATH. THE SELLER ASSUMES NO RESPONSIBILITY FOR INJURY RESULTING FROM THE USE OR HANDLING OF THIS PRODUCT. THE PURCHASER AGREES TO USE THESE PYROTECHNIC CARTRIDGES ENTIRELY AT THEIR OWN RISK, TO BE LIABLE FOR ANY DAMAGE TO PERSONS OR PROPERTY, TO INDEMNIFY AND SAVE HARMLESS THE SELLER, ITS AGENTS, SERVANTS AND EMPLOYEES FROM ANY AND ALL LIABILITY RESULTING FROM THE OPERATION OR USE OF THESE CARTRIDGES.

