 


# CRITTER GUARD

# 4001 - INSTRUCTION MANUAL



FOR PRODUCT  
MANUALS AND VIDEOS,  
SCAN THE QR CODE



DISCLAIMER: THIS PRODUCT WAS DESIGNED AND INTENDED FOR THE SOLE PURPOSE OF WILDLIFE CONTROL AND MANAGEMENT. THE PROPER AND SAFE USE OF THIS PRODUCT IS THE SOLE RESPONSIBILITY OF THE OWNER AND/OR OPERATOR. THE SELLER ASSUMES NO RESPONSIBILITY OR LIABILITY FOR THE IMPROPER AND/OR ILLEGAL USE, RESALE, ANY PHYSICAL INJURY AND/OR PROPERTY DAMAGE RESULTING FROM DELIBERATE OR ACCIDENTAL DISCHARGE OF THE PRODUCT, OR MODIFICATIONS MADE TO THE PRODUCT, SELF-SUPPLIED MATERIALS USED ALONG WITH THE PRODUCT, CARELESS OPERATION OR MAINTENANCE NEGLECT OF THIS PRODUCT.



The Margo Critter Guard is a motion-activated wildlife deterrent with a built-in speaker that emits noises specifically designed to scare animals in it's vicinity. The Critter Guard is able to detect movement from 10m (30ft) away.

## POWER

This device includes 1 LiFePO4 rechargeable battery, MAX 3.6v. If desired, a 3V non-rechargeable, size RCR123A battery can be substituted. When using Critter Guard with a non-rechargeable battery, the solar panel must be disconnected to reduce damage.

Always wear ear protection when in the vicinity of the speaker! Never hold device close to yours or anyone else's ears! The speaker can produce noises exceeding 105DBA (range 1-5KHZ).

## MOUNTING AND STARTUP

1. Mount the Critter Guard in the desired location.
  - ▶ South-facing, ideally where it will be exposed to sunlight for charging.
2. Turn on the Critter Guard by pressing the power button on the side.
  - ▶ Both indicator lights will briefly flash.
  - ▶ After 10 second delay, the indicator light will flash again.
  - ▶ Device will emit a sound.

## HARDWARE SETUP

1. Remove the lid by pressing both buttons on each side of the Critter Guard
2. Use the following table to set the mode switches:

Siren Mode	Switch 1	Switch 2
Alarm Like Mode (suggested mode)	Down	Down
Two Alternating Tones	Down	Up
Random Tones and LED Blinking	Up	Down
Silent, Only LED Blinking	Up	Up

- ▶ Switch 1 and 2 sets the sound mode combination.
  - Up - high volume
  - Down - low volume



Sensitivity range is between ~3m and ~11m  
Sensitivity can be adjusted using a 2.5mm screwdriver

3. Once configured, replace the lid.